

## Core Removal Instructions for Kenstan MEDECO Removable Core Series Locks

Kenstan MEDECO Removable Core Series Locks use a 5-pin operating key and a 4-pin "control" key.


The operating key is for daily use to secure and un-lock the cylinder (pictured on the left). The key is longer and stamped at the Kenstan factory with a 4-digit keycode.

The control key is used only to remove and insert cores as required (pictured on the right). The key is shorter and stamped at the Kenstan factory with a 4-digit keycode followed by the designation "CTL".





**NOTE:** Normal operation of the lock will not be reviewed in depth in these instructions so for our purposes we will be focusing on the 4-pin control key.

**Step 1:** Insert control key into lock.

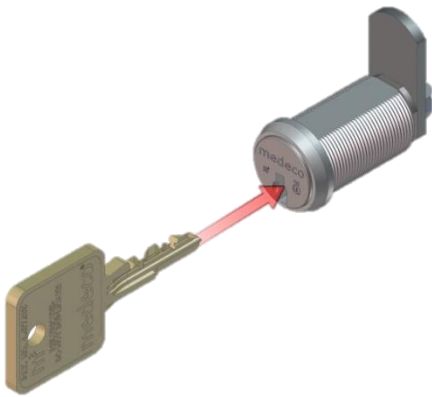


**Step 2:** Rotate the core 90° past the normal function of the lock and in the same direction.

i.e. If the lock normally rotates 90° (i.e. CLR041203PNNNNN) to the right to open, then rotate the key+core 180° (as shown). For a lock that normally rotates 180° (i.e. CLG041206PNNNNN), rotate the key+core 270°.

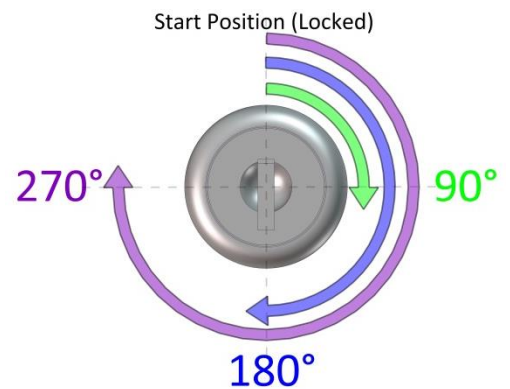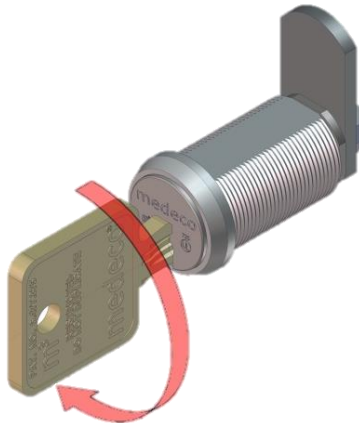

**Step 3:** Pull Key and Core out of the lock housing.

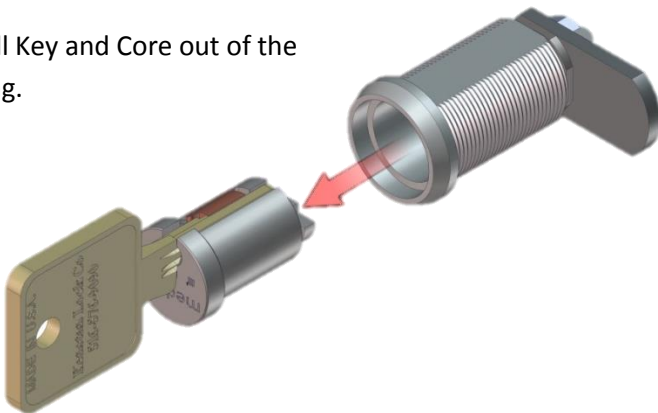

Lock Housing Ready for Core Insertion.

